

# PCU04 Ultrasonic Level Transmitter

#### **Features**

- Wide voltage adaptation range
- Backup and Restore Settings Function
- Measure a variety of parameters
- Analog output can be adjusted arbitrarily
- Support custom serial data format
- With arbitrary setting of the start point and end point of the output range
- With value-added/difference ranging options, both distance and level can be measured
- With multilevel emission pulse intensity, which can be set according to working conditions
- OLED display (with backlight)



- Sewage/waste water/tap water treatment equipment. Such as silos, open tanks, dams and wells.
- Liquids such as edible-oils, sauces and beverages
- Chemical material such as solvent, paints, carbonic acid, water lime slurry and wax.
- Granular materials such as flour, wheat and corn
- Chemical fibers, petrochemical materials



#### **Overview**


The ultrasonic level transmitter is a low-cost, non-contact and easy-to-install measurement device. It is able to meet the every-day needs of commercial production, as well serving a more specialized role in the technologically advanced aerospace industry, thus placing it firmly in the category of high-level measurement technology. Unlike other level indicators with limited uses, the easy-to-install ultrasonic level indicator is a highly accurate device with enough specialized uses to ensure that the needs of the customer are met.



Parameters				
Power supply	(18~28) VDC (2 wire) 、 (12~24) VDC、220VAC			
Power consumption:	<1.5W (other can be customized)			
Measure Range	5m、10m、15m			
Accuracy	±0.3%FS			
Blind zone	0.4m (5m) 0.5m (10m) 0.6m (15m)			
Display resolution	1mm			
Display	OLED (with Backlight)			
Output (optional)	4~20mA RL>600Ω (standard) (0~5)V/(0~10)V RS485			
Relay output	2-way relay (AC: 5A 250V DC: 10A 24V)			
Working temperature	-20~60℃ (high temp can be customized)			
Ingress Protection	IP65(IP68 optional)			
Humidity	≤80%RH (without condensation)			
Language	Chinese/English			
Installation	Thread / Flange			
Temperature compensation	Automatic			
Measure type	Level / Distance			
Launch angle	<10°			
Material	ABS、PP			
Electrical Interface	M20X1.5-2			
Installation interface	M60X2			
Keyboard	Three touch keys			



### **Dimension**

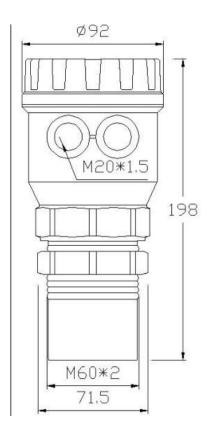

### **Principle**

The principle of operation of the ultrasonic sensor system is to use the ultrasonic pulses which are transmitted by the transducer to the surface to be monitored and are reflected back to the transducer, the time period between transmission and reception of the sound pulses is directly proportional to the distance between the transducer and surface


The latest microcomputer technology and the proven processing software select the level echo from among any number of false echoes and calculate the exact distance to the product surface.

B = Blanking distance

D =Distance from transducer to material surface

L = Height in silo



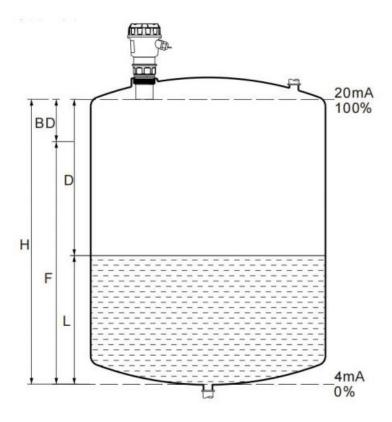

The distance D is determined from the velocity of sound and the time period t by the formula:  $D = V^*T/2$ 

### Example:

With the velocity of sound = 334.1 M/s, a time period of 60m/s corresponds to a transmission path of 20.046M and thus to a distance of 10.023M.


An integrated temperature sensor detects the temperature in the vessel and compensates the influence of temperature on the signal running time.




## Wiring

### 1. Conventional wiring


The number on the terminal of the machine should correspond to the number on the label on the product body.

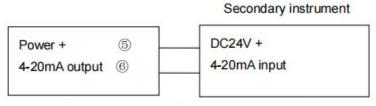

## Schematic diagram of the connection of two-wire

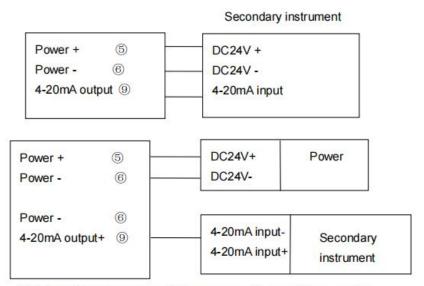


Schematic diagram of the connection of three-wire

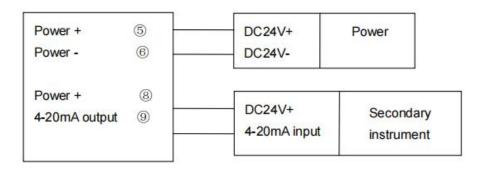


Schematic diagram of the connection of four-wire

Nov. 2023 5 www.wtsensor.com



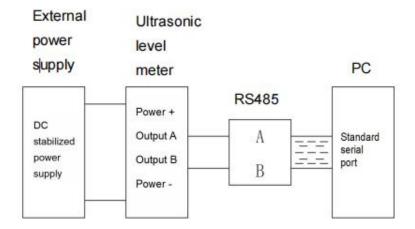

### 3. NPN output wiring diagram

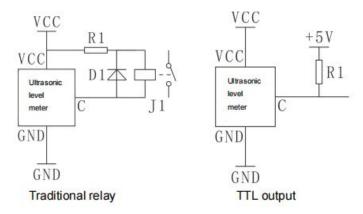

Switch output control logic description:

The machine has three-way NPN switch output or two-way relay output. When using, it is necessary to set the switch control logic point, namely D value and H value. D is the switch start point, and H is the switch stop point. It works as shown in the following diagram (assuming the displayed value is X):

When the set D value is smaller than the H value:

X <d< th=""><th>D point</th><th>D<x<h< th=""><th>H point</th><th>X&gt;H</th></x<h<></th></d<>	D point	D <x<h< th=""><th>H point</th><th>X&gt;H</th></x<h<>	H point	X>H
switch on	D point	value hold	11 point	switch off

When the set D value is bigger than the H value:



X>D	David	D>X>H	Unaint	X <h< th=""></h<>
switch on	D point	value hold	H point	switch off

# • Three (four) wire wiring definition

Please connect according to the characters marked on the terminal of the meter!


Wiring definition	Terminals		Use or not	
Power supply	⑤DC12~24V+, ⑥ DC12~24V-	⑤DC12~24V+, ⑥ DC12~24V-		
			OYes / ONo	
Current output	Three-wire	⑨ (4~20)mA	OYes / ONo	
	Four-wire	<ul><li>® DC24V+</li><li>9 (4~20)mA</li></ul>	OYes / ONo	
Voltage output	9 <b>0</b> 0-5V <b>0</b> 0-10V <b>0</b> Others		OYes / ONo	
Serial output	③ RS485(A), ④ RS485(B)		OYes / ONo	
Switch output	Relay	① J1_COM, ② J1_NO	OYes / ONo	
		(I)J2_COM, (I)J2_NO	OYes / ONo	
	NPN	① N1	OYes / ONo	
		② N2	OYes / ONo	
		<b>O</b> 7N3 <b>O</b> @N3 <b>O</b> (1)N3	OYes / ONo	

# • Two-wire wiring definition


Please connect according to the characters marked on the terminal of the meter!

Wiring definition	Terminals	Use or not
Power supply	⑤ DC18-28V	OYes / ONo
Output	⑥ (4~20)mA	OYes / ONo
	⑥ HART	OYes / ONo
Earthing	⊕ ±	OYes / ONo

## Installation

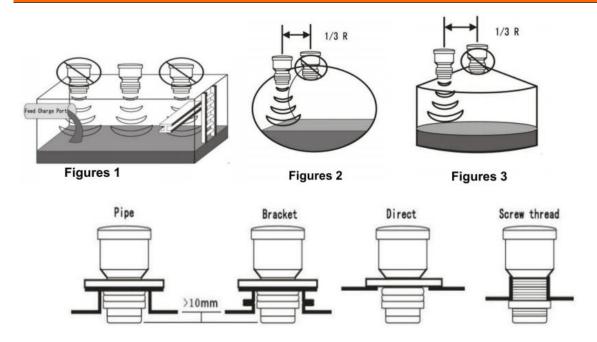

Figures 4

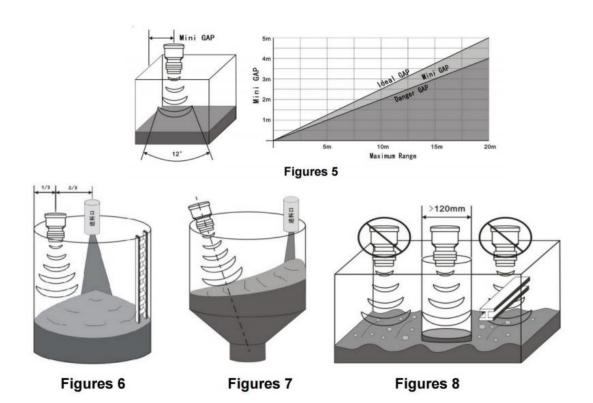



### How to order

PCU04		Description						
	1	0-5m						
Range	2	0-10r	0-10m					
	-			0-15m				
ST1		ABS(standard)						
Probe Type	Probe Type ST2		PTFE/PVDF					
			B1	4-20mA output				
Transmit output			В3	0~5V				
·			B7	0~10V				
				D0 No				
Communication				D2 RS485				
Relay output				A1		No		
					A2	2 relay		
Accuracy			J9	0.3%				
Explosion-proof			,			V1	24VDC	
						V2	220VAC	

Wotian reserves the right to make changes to any product in this publication without notice. The information provided is believed to be accurate and reliable as of this printing.

#### Contact us

Nanjing Wotian Technology Co.,Ltd.

Website: www.wtsensor.com

Add: 5 Wenying Road, Binjiang Development Zone, Nanjing, 211161, China

E-mail: dr@wtsensor.com